

CXM

Remote Display for Phocos CXN Charge Controllers



- Displays panel current, load current, and battery voltage, Ah, SOC, etc.
- Large three-digit LCD display
- Displayed values selectable by means of two push buttons
- · DIN rail adapter and wall mounting possible

The Phocos CXM can be used in combination with Phocos CXN series charge controllers by means of an interface connector. The Phocos CXM remote display is designed to display panel current, load current, and battery voltage of a

PV system as actual values and status as well, like charging, overload, and low-voltage disconnect (symbols). In addition, several values like Ah, SOC battery voltage (morning, evening) from the CXN data logger can be displayed.

Туре	CXM
Voltage range	Will display the voltage range of your CXN
Current range	Will display current range of your CXN
Ambient temperature	−25 to +50 °C
Connecting cable length	2 m
Dimensions (W x H x D)	72 x 68 x 29 mm
Weight	94 g (including connecting cable)
Type of protection	IP22